



1911A1 EXCHANGE SYSTEM

- No° 1 Slide
- No° 5 Firing pin
- No° 3 Extractor
- No° 4 Firing pin spring
- No° 6 Firing pin stop plate
- No°43 Front sight
- No° 2 Rear sight
- No°35 Barrel
- No°37 Barrel link
- No°36 Barrel link pin
- No°34 Barrel bushing
- No°29 Slide stop
- No°45 Ejector
- No°21 Magazine