



1911A1 HiCap (NP44)

DESCRIPTION

Slide.....	1	Mainspring	16	Frame (Receiver).....	30
Rear Sight	2	Mainspring Housing		Recoil Spring Guide.....	31
Extractor.....	3	Pin Retainer.....	17	Recoil Spring.....	32
Firing Pin Spring.....	4	Mainspring Housing	18	Plug.....	33
Firing Pin.....	5	Mainspring Cap Pin.....	19	Barrel Bushing	34
Firing Pin Stop Plate.....	6	Sear Spring	20	Barrel.....	35
Magazine Catch Lock....	7	Magazine.....	21	Barrel Link Pin.....	36
Magazine Catch Spring..	8	Mainspring Housing Pin.....	22	Barrel Link.....	37
Magazine Catch.....	9	Hand Grip.....	23	Disconnecter.....	38
Slide Stop Plunger.....	10	Grip Screw.....	24	Sear.....	39
Plunger Spring.....	11	Stock Screw Bushing	25	Hammer.....	40
Safety Catch Plunger..	12	Safety Catch.....	26	Hammer Strut.....	41
Grip Safety.....	13	Hammer Pin.....	27	Hammer Strut Pin.....	42
Trigger.....	14	Sear and Disconnecter		Front Sight.....	43
Mainspring Cap.....	15	Pin.....	28	Plunger Tube.....	44
		Slide Stop.....	29	Ejector.....	45