



- 1 foresight
- 2 barrels, left & right
- 3 ejector spring
- 4 ejector
- 5 ejector spring pin
- 6 ejector pin
- 7 upper swivel screws left & right
- 8 upper swivel assembly
- 9 firing pin bases, left & right
- 10 firing pins, left & right
- 11 firing pin return springs, left & right
- 12 receiver screw
- 13 top lever screw
- 14 top lever
- 15 safety button
- 16 safety pin
- 17 receiver
- 18 safety link
- 19 safety
- 20 safety screw
- 21 locking bolt spring
- 22 locking bolt spring long screw
- 23 safety spring
- 24 screw
- 25 top lever shaft
- 26 locking bolt
- 27 locking bolt screw
- 28 hammer screws, left & right
- 29 hammer, right
- 30 main spring rod, right
- 31 mainspring
- 32 sideplate, right
- 33 sideplate screws, left & right
- 34 disconnecter, right
- 35 sear springs, left & right
- 36 sleeve, left & right
- 37 sideplate supp. Block screws, l/r
- 38 sideplate supp. Block, right
- 39 sear, right
- 40 hammer, left
- 41 sideplate, left
- 42 sear, left
- 43 disconnecter, left
- 44 sideplate supp. Block, left
- 45 main spring rod, left
- 46 trigger hinge
- 47 receiver long screw
- 48 trigger, left
- 49 trigger guard pin
- 50 screw
- 51 trigger, right
- 52 trigger guard
- 53 trigger spring
- 54 trigger guard screw
- 55 trigger guard
- 56 buttstock
- 57 buttplate
- 58 buttplate screws
- 59 lower swivel assembly
- 60 hinge
- 61 forearm lock pin
- 62 forearm screw
- 63 forearm lock
- 64 locking buckle spring
- 65 screw
- 66 forearm lock base
- 67 forearm
- 68 forearm connector
- 69 screws

# JWW/2000 COUCHGUN