



No.	Names	Q'ty	No.	Names	Q'ty	No.	Names	Q'ty
1	Screw, stock	2	19	Trigger	1	37	Magazine spring	1
2	Butt plate	1	20	Pin	1	38	Firing pin	1
3	Stock	1	21	Safety stop bar	1	39	Main spring	1
4	Safety stop bar spring	1	22	Trigger spring	1	40	Left extractor stop	1
5	Screw	1	23	Back screw, forend	1	41	Stop screw	1
6	Locating screw, stock	1	24	Front screw, forend	1	42	Left extractor	1
7	Trigger spring screw	1	25	Left forend washer	2	43	Right extractor	1
8	Shell lifter screw	2	26	Left forend	1	44	Extractor spring guide	2
9	Left shell stop	1	27	Barrel	1	45	Extractor spring	2
10	Lifter lever pin	1	28	Front sight	1	46	Pin, main spring	1
11	Right shell lifter	1	29	Hoop	1	47	Bolt	1
12	Lifter lever	1	30	Hoop screw	1	48	Lever axle	1
13	Lifter lever pin	1	31	Magazine tube cover	1	49	Lever spring	1
14	Right extractor locating screw	1	32	Magazine tube cover screw	1	50	Lever	1
15	Shell carrier locating screw	1	33	Magazine tube	1	51	Rolling gear support	1
16	Receiver	1	34	Right forend	1	52	Rolling gear	1
17	Bolt axle	1	35	Right forend nut	2	53	Hammer spring	1
18	Trigger axle	1	36	Magazine spring cap	1	54	Hammer	1

NR87 (1887)