


# PPN

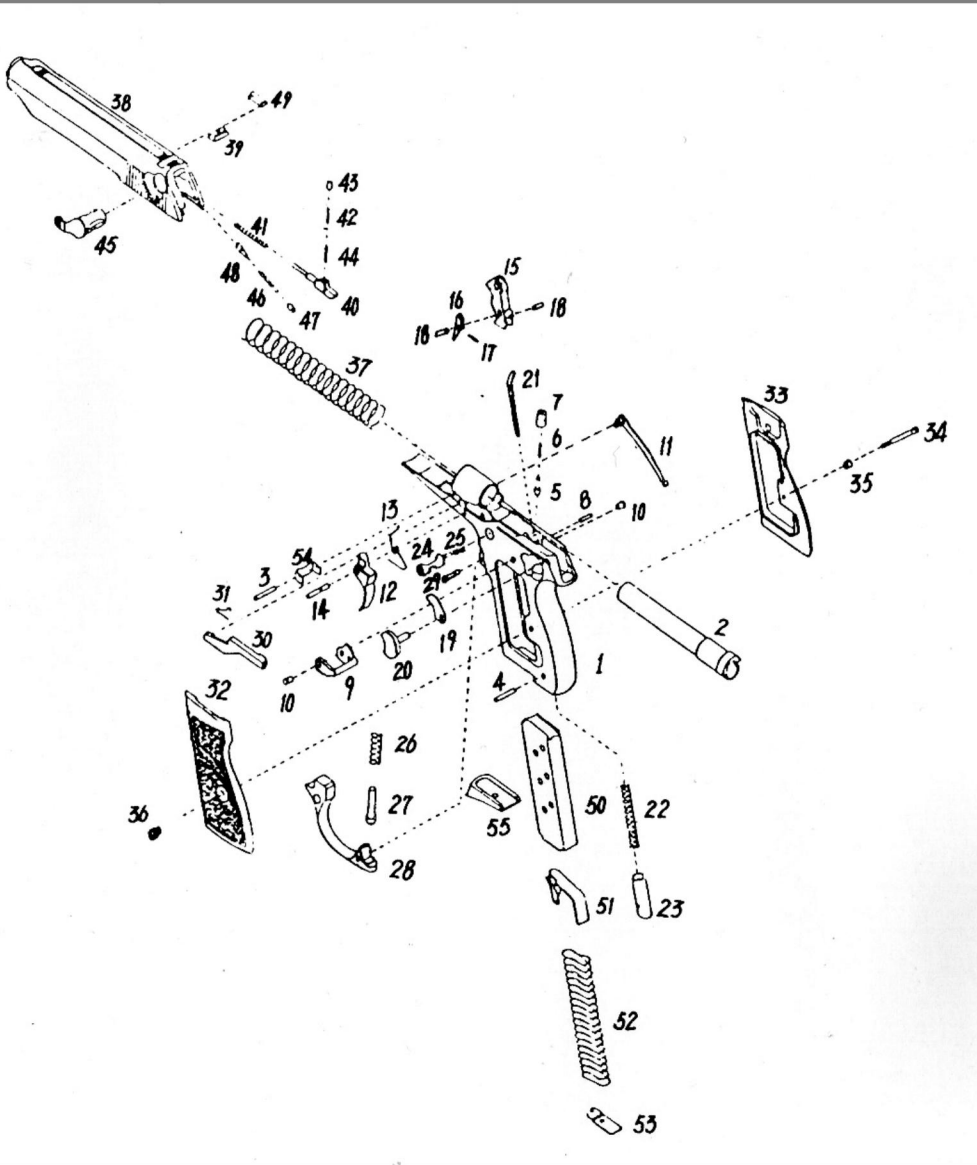

- 1.Frame
- 2.Barrel
- 3.Barrel fixing pin
- 4.Hammer spring plugging pin
- 5.Sear plunger
- 6.Sear plunger spring
- 7.Sear plunger spring bushing
- 8.Sear plunger spring bushing pin
- 9.Sear
- 10.Sear pin
- 11.Trigger bar
- 12.Trigger
- 13.Trigger spring
- 14.Trigger pin
- 15.Hammer
- 16.Hammer cocking lever
- 17.Hammer cocking lever spring
- 18.Hammer cocking lever pin
- 19.Hammer release lever

- 20.Hammer pin
- 21.Hammer strut
- 22.Hammer spring
- 23.Hammer spring plug
- 24.Magazine catch
- 25.Magazine catch spring
- 26.Trigger guard plunger spring
- 27.Trigger guard plunger
- 28.Trigger guard
- 29.Trigger guard pin
- 30.Slide stop
- 31.Slide stop spring
- 32.Left grip
- 33.Right grip
- 34.Grip screw
- 35.Grip screw shell
- 36.Grip screw nut
- 37.Recoil spring

- 38.Slide
- 39.Rear sight
- 40.Firing pin
- 41.Firing pin spring
- 42.Firing pin plunger spring
- 43.Firing pin plunger bushing
- 44.Firing pin plunger spring pin
- 45.Safety
- 46.Extractor spring
- 47.Safety fixing pin
- 48.Extractor bolt
- 49.Extractor
- 50.Magazine body
- 51.Magazine follower
- 52.Magazine spring
- 53.Magazine base plate catch
- 54.Frame washer
- 55.Magazine base