



B2HF

- No. 1 Tube plug
- No. 2 Pipe
- No. 3 Cocking block
- No. 4 Piston spring * (16x schwache)
- No. 5 Piston
- No. 6 "U" type piston seal ring (Kolbenmanschette)
- No. 7 Air-room
- No. 8 Button
- No. 9 Washer
- No. 10 Button screw
- No. 11 Valve set screw
- No. 12 Locking screw
- No. 13 Locking pin tongue spring
- No. 14 Locking pin tongue
- No. 15 Fix clamp
- No. 16 Little ring
- No. 17 Sight view
- No. 18 Rear sight piece
- No. 19 H-L screw
- No. 20 Screw
- No. 21 Press spring
- No. 22 Steel ball
- No. 23 R-L screw
- No. 24 Barrel
- No. 25 Front sight
- No. 26 Front sight ring
- No. 27 Trigger
- No. 28 Trigger spring
- No. 29 Trigger pin
- No. 30 Locking pin tongue screw
- No. 31 Lever
- No. 32 Screw
- No. 33 Stock-end
- No. 34 Backing board
- No. 35 Stock (alt)
- No. 35 Stock (neu)
- No. 36 Screw
- No. 37 Trigger circle
- No. 38 Screw
- Nr. 39 Internal teeth washer
- Nr. 40 Side-screw
- Nr. 41 Front sight (with fiber)
- Nr. 42 Rear sight
- Nr. 43 Vernier
- Nr. 44 Rear sight spring

* Nr. 4 piston spring B2: weak 21cm/strong 25cm
 piston spring B1: weak + strong 20cm