



- No° 1 Front sight assembly
- No° 2 Barrel receiver assembly
- No° 3 Tube guide base
- No° 4 Tube guide base pin
- No° 5 Tube guide
- No° 6 Tube magazine pin
- No° 7 Tube magazine
- No° 8 Check spring
- No° 9 Following plug
- No°10 Tube magazine spring
- No°11 Stopper
- No°12 Washer
- No°13 Joint screw
- No°14 Stock JW21A (spezial aber mit JW21 austauschbar)
- No°14 Stock JW21B (spezial und mit JW21 nicht austauschbar)
- No°15 Butt plate
- No°16 Butt plate screw
- No°17 Lever axis
- No°18 Small lever
- No°19 Spring washer
- No°20 Big lever
- No°21 Mainspring retainer
- No°22 Main spring
- No°23 Trigger
- No°24 Trigger spring pin
- No°25 Trigger pin
- No°26 Fire base
- No°27 Cartridge stop
- No°28 Lever stop
- No°29 Spring plate
- No°30 Screw
- No°31 Screw (spezial)
- No°32 Guard Ring (Schafttring) (spezial)
- No°33 Rear sight elevator (spezial)
- No°34 Join sleeve
- No°35 Support plate spring pin
- No°36 Support plate pin
- No°37 Hammer
- No°38 Rear sight (spezial)
- No°39 Support plate spring
- No°40 Trigger spring
- No°41 Support plate
- No°42 Cartridge stop
- No°43 Drive pin
- No°44 Firing body
- No°45 Breech bolt frame
- No°46 Extractor
- No°47 Extractor spring
- No°48 Firing pin
- No°49 Cartridge clutch
- No°50 Cartridge clutch inner spring
- No°51 Cartridge clutch outer spring
- No°52 Right extractor
- No°53 Right extractor spring
- No°54 Right extractor pin
- No°55 Left extractor pin
- No°56 Left extractor
- No°57 Breech bolt
- No°58 Support cartridge stop
- No°59 Support cartridge spring
- No°60 Support cartridge stop spring
- No°61 Pin
- No°62 Stop spring pin
- No°63 Clutch cartridge pin
- No°64 Rear sight assembly (spezial)
- No°65 Barrel base
- No°66 Forearm assembly
- No°67 Forearm screw
- No°68 Join screw
- No°69 screw (spezial)
- **Spare magazine (No°6-7-8-9-10-11)

JW21B