



# B19-18

1	B18-04-1A	Piston Seal
2	B18-04-100D	Piston
3	B18-00-3	Front Spring Guide
4	B18-00-4D	Piston Spring
5	B18-00-6	Back Spring Guide
6	B19-00-100	Spring Guide Assembly
7	B19-8-00-1	Tube Cover
8	B19-18-01-1	Front Sight
9	B19-3-01-100B	Barrel Assembly
10	B19-18-02-00	Rear Sight
11	B22-00-1	Adjust Washer
12	B12-00-14	Breach Seal
13	B18-01-3A	Jam Spring
14	B18-01-2A	Alive Jam
15	B18-00-2	Detent
16	B19-2-03-00	Compression Tube Assembly
17	B18-00-7	Fixed Pin
19	B12-00-1B	Link Pin
20	B19-2-00-2	Break Bolt
21	B18-00-15A	Washer
22	B18-01-1C	Bushing
23	B18-07-00	Lever Assembly
24	GB/T97.1-2002 5	Plain Washers
25	GB/T 818-2000 M5×14	Pan Head Screws - nylok
26	B18-00-5B	Bear Trap Lever
27	B18-00-12A	Safety Spring
28	GB896-86 3	E-Ring
29	B18-05-00	Trigger Pack Assembly
30	B18-00-9	Stock link bolt
31	B19-2-00-1	Stock Lug Brace
32	B19-06-00A	Stock assembly
33	B18-00-11A	Trigger Guard
34	GB847-85 ST3.5×16	Screw, Trigger Guard Front
35	GB823-88 M6X20	Screw, Trigger Guard Rear - nvlok