

M93

PARTS DIAGRAM

1. Frame
2. Barrel
3. Back strap
4. Slide
5. Firing pin
6. Firing pin spring
7. Firing pin screw
8. Extractor
9. Extractor plunger
10. Extractor spring
11. Recoil spring
12. Recoil spring guide
13. Assembly lock
14. Assembly lock plunger
15. Windage screw
16. Windage lock screw
17. Rear sight
18. Hammer
19. Hammer strut pin
20. Firing pin block retractor
21. Hammer strut
22. Sear
23. Firing pin block
24. Firing pin block spring
25. Firing pin block pin
26. Sear pivot pin
27. Safety
28. Trigger spring
29. Side plate
30. Side plate screw
31. Trigger pivot
32. Trigger
33. Trigger bar
34. Magazine safety
35. Magazine safety spring
36. Backstrap seat pin
37. Magazine catch/sear spring
38. Hammer spring guide
39. Hammer spring
40. Hammer spring guide pin
41. Grip screw
42. Slide stop
43. Slide stop spring
44. Grip panel (left & right)
45. Magazine shell
46. Magazine follower
47. Magazine spring
48. Magazine follower button
49. Floorplate lock
50. Floorplate
51. Slide stop plate
52. Slide stop plate screws (2)

