



- No° 1 Rear sight
- No° 2 Barrel item no. 154182
- No° 3 Guide recoil spring
- No° 4 Recoil spring
- No° 5 Slide stop
- No° 6 Right grip plate (43x Plastik, 25x Holz)
- No° 7 Left grip plate (43x Plastik, 25x Holz)
- No° 8 Screw
- No° 9 Extractor
- No°10 Pin extractor
- No°11 Spring extractor
- No°12 Firing pin
- No°13 Spring firing pin
- No°14 Locating pin
- No°15 Spring locating pin
- No°16 Safety
- No°17 Stop firing pin
- No°18 Spring top pin
- No°19 Top pin
- No°20 Slide assembly item no. 154174
- No°21 Receiver (frame)
- No°22 Spring limit pin
- No°23 Limit pin
- No°24 Trigger
- No°25 Pin trigger
- No°26 Spring trigger
- No°27 Disconnecter
- No°28 Pin disconnecter
- No°29 Housing sear
- No°30 Sear
- No°31 Pin sear
- No°32 Spring, sear
- No°33 Magazine catch
- No°34 Spring magazine catch
- No°35 Spring disconnecter
- No°36 Screw spring
- No°37 Hammer
- No°38 Carrier rod hammer
- No°39 Strut hammer
- No°40 Pin hammer
- No°41 Screw hammer pin
- No°42 Main spring
- No°43 Main spring housing
- No°44 Pin main spring housing
- No°45 Baffle
- No°46 Pin
- No°47 Pin sear housing
- No°48 Magazine tube
- No°49 Feeder
- No°50 Spring magazine
- No°51 Insert magazine

No°52 Floorplate magazine  
 No. 48-52 Magazine  
 w/o no. front sight (=NZ85B #31)

**NZ85**