



HP9

PARTS LIST

#	Name	#	Name
1	Barrel	37	Safety Spring Retaining Pin
2	Front Sight	38	Rear Trigger Guard Pin Bushing
3	Barrel Alignment Ring	39	Trigger Guard Pin Detent Spring, Rear
4	Receiver	40	Trigger
5	Magazine Tube	41	Connector, Left
6	Magazine Tube Seat	42	Connector, Right
7	Ejector	43	Connector Pin
8	Ejector Spring	44	Trigger Pin
9	Ejector Rivet (Rear & Front)	45	Sear
10	Magazine Follower	46	Sear Pin
11	Magazine Spring	47	Sear Spring
12	Magazine Plug	48	Hammer Spring
13	Magazine Spring Retainer	49	Hammer Plunger
14	Shell Latch, Left	50	Hammer
15	Shell Latch, Right	51	Bolt Release Spring
16	Receiver Stud	52	Bolt Release
17	Breech Bolt	53	Bolt Release Washer
18	Locking Block	54	Hammer Pin
19	Locking Block Stud	55	Shell Carrier
20	Firing Pin Retractor Spring	56	Carrier Line Washer
21	Firing Pin	57	Carrier Link
22	Firing Pin Retaining Pin	58	Carrier Link Pin
23	Extractor Spring	59	Carrier Link Follower
24	Extractor Plunger	60	Carrier Link Follower Spring
25	Extractor	61	Trigger Guard Pin Bushing
26	Slide	62	Trigger Guard Pin Detent Spring, Front
27	Slide Plate	63	Stock
28	Fore - end	64	Trigger Guard Pin, Rear
29	Fore - end Tube	65	Butt Plate
30	Action Bar, Left	66	Butt Plate Screw
31	Action Bar, Right	67	Butt Plate Spacer
32	Fore - end Tube Nut	68	Trigger Guard Pin, Front
33	Trigger Guard	69	Stock Bolt
34	Safety	70	Magazine Cap
35	Safety Detent Ball	71	Stock Bearing Plate
36	Safety Detent Spring	72	Stock Bolt Washer